



Disassembling FujiFilm FinePix A340 Outer Case

Tools used in this guide

- [Tri-wing Screwdriver #0](#)





Step 1 - Outer Case

- Remove batteries from camera to prevent danger of shock.



Step 2


- Locate all five screws on the Fujifilm camera. If your screwdriver fits properly, proceed to remove all screws.

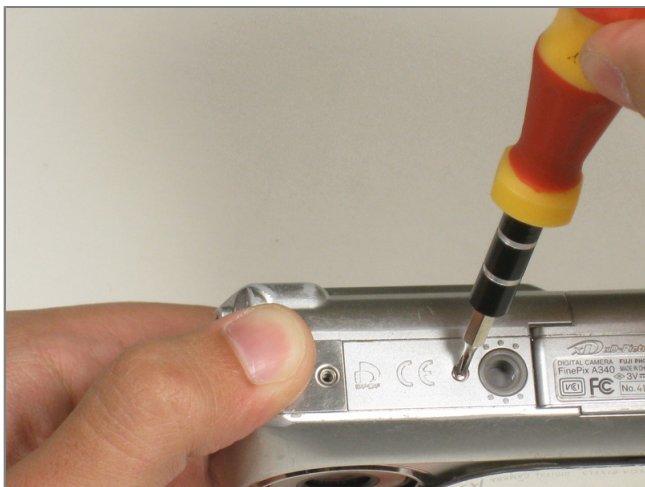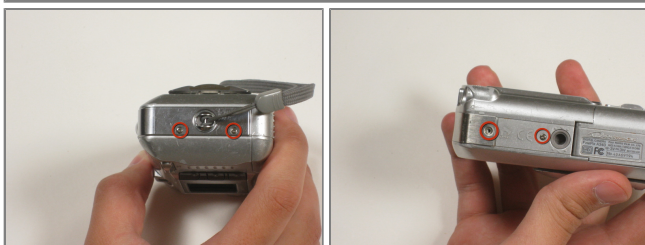

Step 3

- Beware, if your screwdriver does not fit properly, you may round out the screws' heads.
- If your screwdriver does not fit, or you do not have the proper one, you can use a hot glue gun to fix the screwdriver to the head of the screw. Wait for it to harden slightly, and then try to remove the screws.



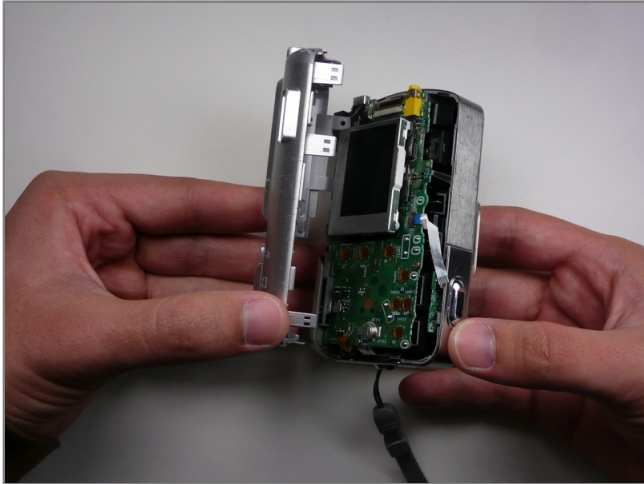

Step 4

- Remove outer case. Pull the back away from the main body of the camera.

